


Locate removable door on scoreboard. Remove door and remove cover of electrical enclosure to make connections shown to right.

Notes:

- 1) Phillips head screw driver required to remove door and cover.
- 2) Be sure to replace cover and door after installation.
- 3) Some scoreboards will already have a cable routed in the board for this application.
- 4) Note serial number on back of receiver assembly for programming MPCW or MPCX2 controller.



MPCX2 Control

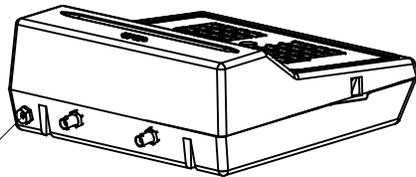


Connect to power

**MPCW
Operator's Control**


Panel will be located near electrical enclosure

Remove existing panel near electrical enclosure and route supplied cable from OCM to opening. (keep screws to install receiver assembly)

Receiver Assembly
3 bars denotes W7
4 bars denotes X2

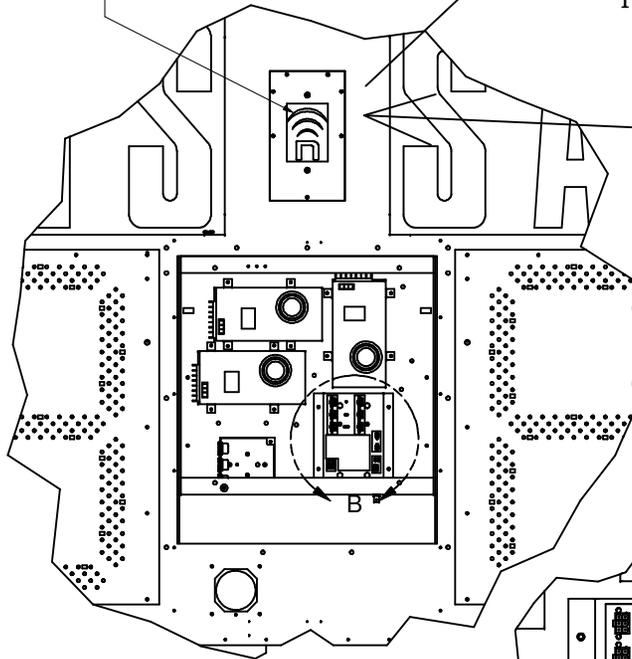


Connect cable to receiver assembly and mount receiver assembly using existing screws

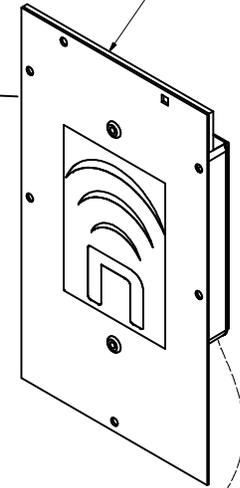

DETAIL A

Outdoor Control Module (OCM)

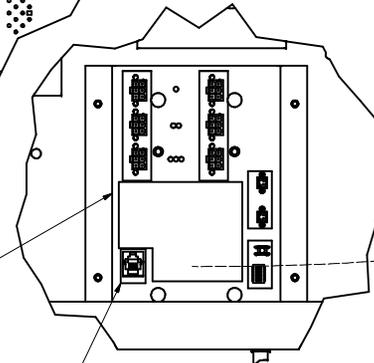

DETAIL B

Connect cable here

Route supplied cable from OCM to opening where the receiver assembly is to be installed BEFORE mounting receiver assembly.

Wireless Outdoor MPCW7 / X ₂ Receiver Installation		 Nevco, Inc. Greenville, Illinois 62246	
Drawn DBB	Date 3/4/15	Sheet 1 of 1	