

Locate removable door on scoreboard. Remove door and remove cover of electrical enclosure

Notes:

88

D

1) Phillips head screw driver required to remove door and cover.

2) Be sure to replace cover and door after installation.

3) Some scoreboards will already have a cable routed in the board for this application.

4) Note serial number on back of receiver assembly for programming MPCW or MPCX2 controller.

MPCX2 Control

Connect to power

Rev А Remove existing panel near electrical enclosure Panel will be and route supplied cable located near from OCM to opening. Receiver Assembly electrical (keep screws to install 3 bars denotes W7 enclosure receiver assembly) 4 bars denotes X2 Connect cable to receiver assembly and to make connections mount receiver shown to right. assembly using existing screws DETAIL A Outdoor Route supplied cable Control from OCM to opening Module where the receiver (OCM) assembly is to be DETAIL B installed **BEFORE** Connect cable here mounting receiver assembly. Wireless Outdoor MPCW7 / X_2 **Receiver Installation MPCW** Nevco, Inc. Greenville, Illinois 62246 **Operator's Control** Drawing No. 275-0681 Drawn DBB ^{Date} 3/4/15 $\frac{1}{1}^{of}$ 1 4